



Tuning DBAIR Volume

Volume Inserts may be added to increase the shock air spring progression

1. Remove air valve cap.
2. Release all air pressure.
3. Remove small retaining o-ring.
4. Place shock in a soft jaw vice with the air can on top.
5. Using rubber strap wrench for grip; slide air can up and off the shock.
6. Install volume insert around inner air can.
7. Inspect both air can o-rings and apply grease. Replace if necessary.
8. Re-install air can.
9. Install retaining o-ring. Rotate air can to desired orientation.
10. Inflate shock and check for proper air sealing.

