


| Ti | tle: | Process: | Page: | Rev Date: | File Location: |
|----|------|--------------|---------------------------|-----------|---|
| | HELM | 50hr Service | Page 1 of 9 | 8/1/17 | \\Bluetail\Engineering\Service Procedures |

Rebuild requires service kit: BAG0409

Replacement parts in service kit are shown below. Call Cane Creek customer service @ 828-684-3551

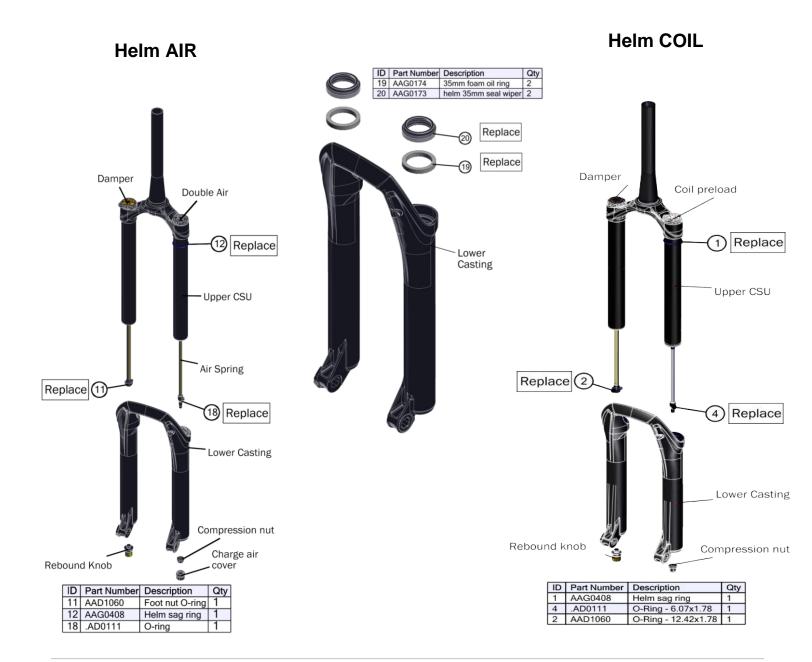

CANE CREEK CYCLING COMPONENTS



| Title: | Process: | Page: | Rev Date: | File Location: |
|--------|--------------|---------------------------|-----------|---|
| HELM | 50hr Service | Page 2 of 9 | 8/1/17 | \\Bluetail\Engineering\Service Procedures |
| | | | | |

Helm AIR


Helm COIL



- 1. Keep fork upright and remove air cap and Charge button cover.
- 2. Push both buttons to remove air from the negative and positive chambers. Do this several times to make sure all air is evacuated from the fork






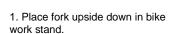

2. Remove the air spring cap, damper rebound nut and air spring foot nut.



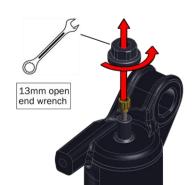






- 1. Turn fork upside down
- 2. Push on foot nuts to release them from casting.
- **Do not use hammer**

CANE CREEK CYCLING COMPONENTS



| Title: HELM | Process: 50hr Service | Page: Page 3 of 9 | Rev Date: 8/1/17 | Tile Location: \\Bluetail\Engineering\Service Procedures |
|-------------|-----------------------|------------------------------------|------------------|--|
| | | age e er e | 5 , ., | |

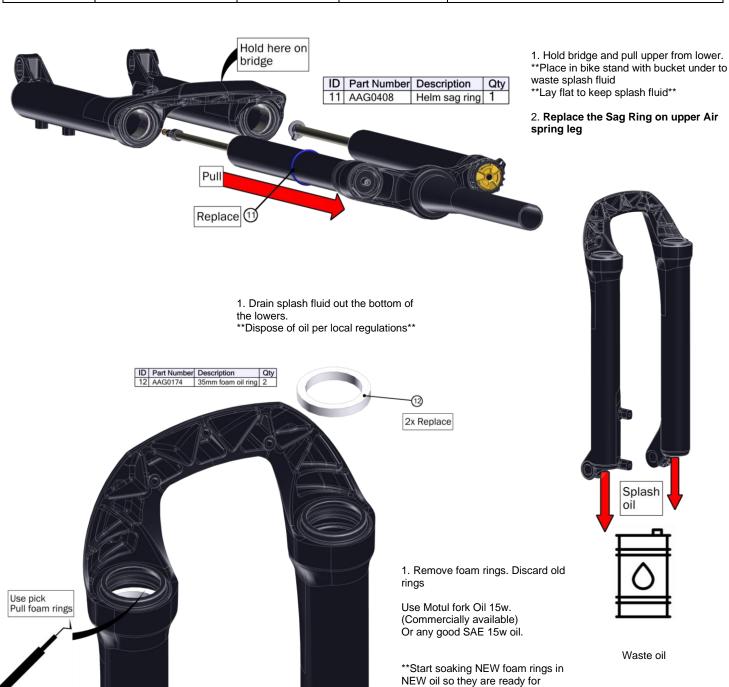

CANE CREEK CYCLING COMPONENTS

355 Cane Creek Road, Fletcher, NC 28732 | 800.234.2725 | info@canecreek.com | canecreek.com

installation**



| Title: | Process: | Page: | Rev Date: | File Location: |
|--------|--------------|---------------------------|-----------|---|
| HELM | 50hr Service | Page 4 of 9 | 8/1/17 | \\Bluetail\Engineering\Service Procedures |
| | | | | |

1. Clean all dirt and mud off.





1. Use a 17mm open end wrench or metal tire lever to pry out seals. Use a shop rag or pad under tool to avoid scratching lower.




- 1. Use a diluted degreaser (simple green) and wash bores. Rinse with water and blow bores with pressurized air.
- **Do not scratch bushings**
- **Remove solvent from painted surfaces as degrease may damage finish**
- 2. Let unit completely dry. All water must be completely removed.


CANE CREEK CYCLING COMPONENTS



| Title: | Process: | Page: | Rev Date: | File Location: |
|--------|--------------|---------------------------|-----------|---|
| HELM | 50hr Service | Page 5 of 9 | 8/1/17 | \\Bluetail\Engineering\Service Procedures |
| | | | | |

- 1. Install wipers into bores dry. Install using a 35mm wiper install tool (Commercially available) Place thick rag under drop out to protect lower.
- 2. Use rubber mallet to tap wiper into bore.
- **Large hex socket will work in place of wiper install tool if needed**
- **If wiper install proves difficult to start Use a very lite amount of 15w oil on wipers**
- ***DO NOT USE ANY TYPE OF GREASE TO INSTALL WIPERS***
- 3. Install wipers flush; Wipers will not bottom out so do not push too far.

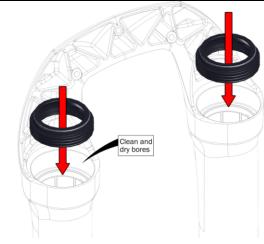

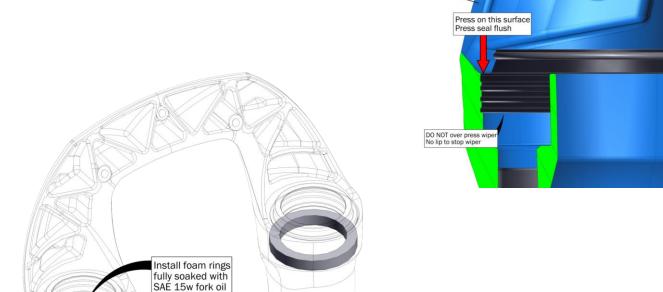

Blue for clarity

1. Install NEW foam rings. Install with fingers – a dull pick can be used to adjust foam ring.



| Title: HELM | Process: 50hr Service | Page: Page 6 of 9 | Rev Date: 8/1/17 | Tile Location: \\Bluetail\Engineering\Service Procedures |
|-------------|-----------------------|----------------------|------------------|---|
| | | o o | | |



- 1. Confirm bottom out bumpers are present and correct orientation before installing lowers.
- 2. Grease bushings with slick honey or equiv.





CANE CREEK CYCLING COMPONENTS



| Title: HELM | Process: 50hr Service | Page: Page 7 of 9 | Rev Date: 8/1/17 | Tile Location: \Bluetail\Engineering\Service Procedures |
|-------------|-----------------------|------------------------------------|------------------|---|
| | | | | g g |


1. Install Lowers

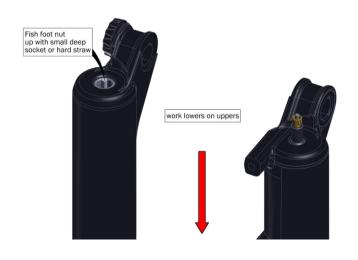

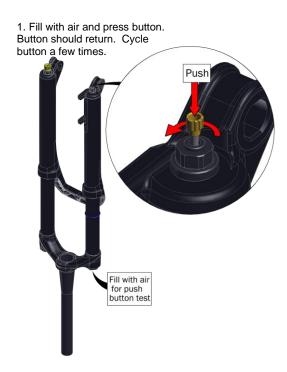




- 2. Apply Loctite
- 3. Torque per spec

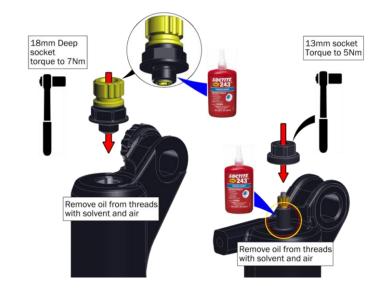



| Title: | Process: | Page: | Rev Date: | File Location: |
|--------|--------------|---------------------------|-----------|---|
| HELM | 50hr Service | Page 8 of 9 | 8/1/17 | \\Bluetail\Engineering\Service Procedures |
| | | | | |

Helm AIR

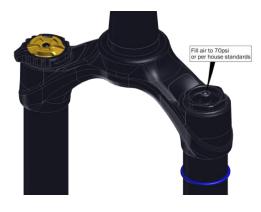


Helm COIL

- 1. Fill with air and install air cap.
- 2. Turn fork over and place steer on ground and bounce before installing on bike. (To check air spring integrity)
- 3. Hold fork slightly compressed to check for air loss.



1. Thread push button closed and install cap.

Helm AIR only

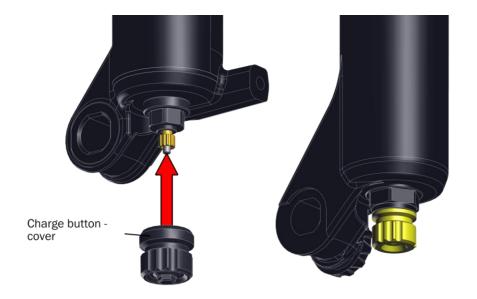



| Title: HELM | Process: 50hr Service | Page: Page 9 of 9 | Rev Date: 8/1/17 | Tile Location: \\Bluetail\Engineering\Service Procedures |
|----------------|-----------------------|------------------------------------|------------------|--|
| | | | | |

| Date | Revision | Description of Change |
|---------|----------|---|
| 8/1/17 | Α | Initial Release |
| 9/12/18 | В | Fixed nomenclature; added Helm coil pictures; changed splash fluid per MB |
| | | |