


## Preload Assembly Instructions:

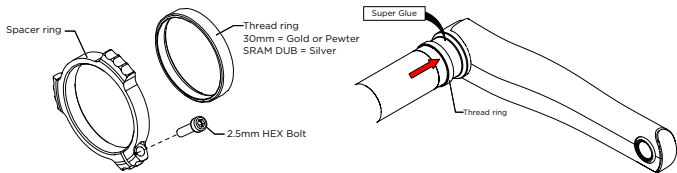

### **30mm spindles cranks = DARK PEWTER or GOLD thread ring** **SRAM DUB cranks = SILVER thread ring**

1. Remove crankset from the bike
2. Completely remove the existing preload assembly, both the male and female thread portion. For cranks with integrated preload threads, use only the outer spacer ring (skip to step 4, no glue required).
3. Apply a strip of super glue to the part of the spindle where the Thread Ring of the Cane Creek preload will be located. The super glue is intended to bond the Thread Ring to the spindle, and is NOT to be applied to the threads of the Thread Ring. Twist the Thread Ring around the spindle to spread the super glue evenly between the spindle and the Thread Ring.
4. After the super glue is dried, install the Spacer Ring completely onto the spindle of the crank so that no preload is applied.
5. Reinstall the crankset onto the bike and adjust preload as necessary, fasten 2.5mm bolt to 1.4Nm (12.4in-lb) on Cane Creek preload assembly to complete installation.

*\*30mm Gold or Pewter thread ring color varies based on production time\**